
 



EG91X

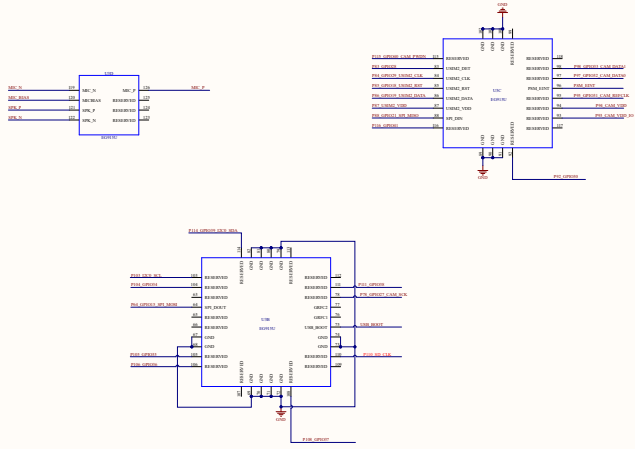

ADC




EG91X

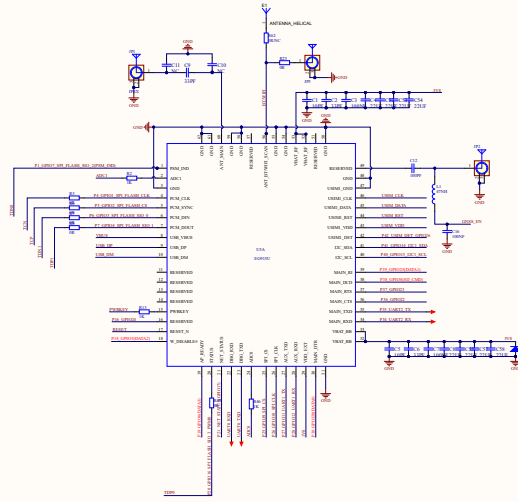


SWITCH



 
FLASH




SD_CARD

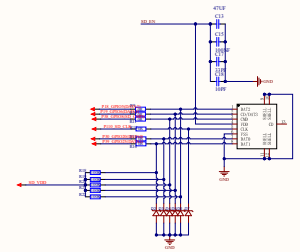


Type-C&USB

 


LIGHT

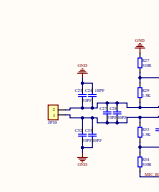


MIC&SPK

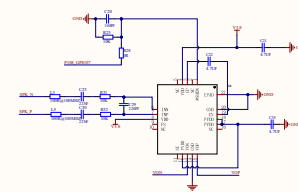

DISPLAY

 


DCDC+LDO

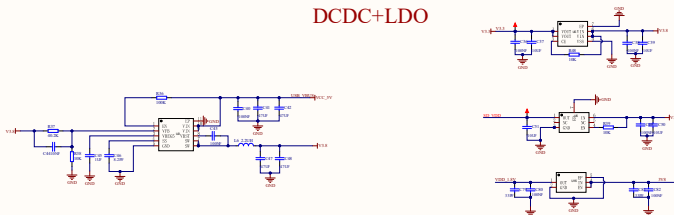


SIM2




Level Translation

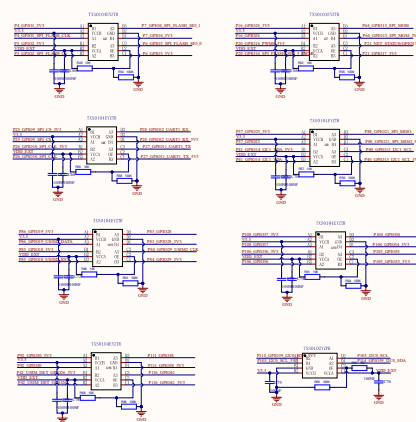


Cam

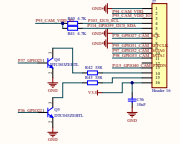

40PIN

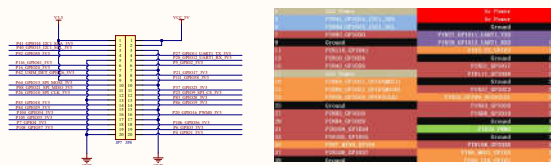

NET

 

PSM_IND




SIM




SIM1



 KEY




 SCK GND
 TP44 TP45 R40 TP48
 3V8 TP40 PWDN
 SDA0 TP46 TP50
 SCL0 TP47 Cam_VDD



TP49 SD_VDD

SD 2.0

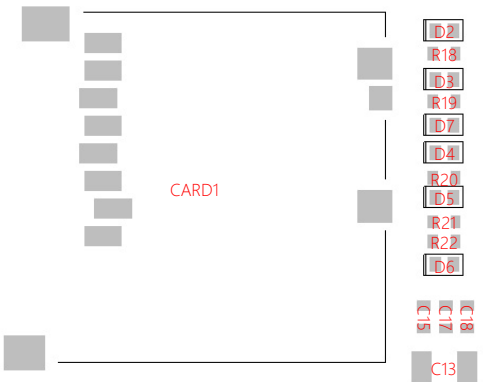

- IR10
- IR9
- IR16
- IR14
- IR12
- IR11
- TP8 DAT3
- TP22 DAT2
- TP12 DAT1
- TP11 DAT0
- TP10 CLK
- TP9 CMD
- TP13 VDD

R65 R60



C70 C69




R57 R59


C68 C67



R56 R58

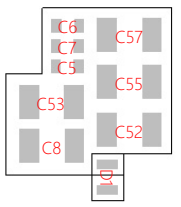


USB_ON/OFF

 


CLK2 DAT2



SIM2

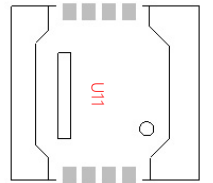

RST2 VDD2 TP20 TP17

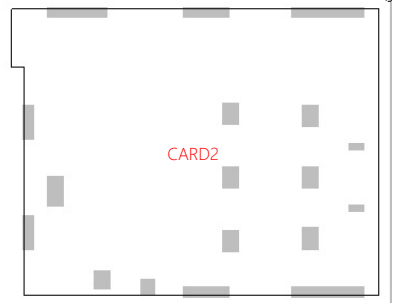

SIM1

- TP14 VDD
- TP18 DAT
- TP16 CLK
- TP15 RST

